

Battery and Alternator Tester (Art. 2189)



- for fault diagnosis of 12V battery and charging systems
- easy to use, just connect and check indicator lights
- LED's are electronically controlled
- 3 LED's for battery test:
 - LED red = battery empty or defective
 - LED yellow = battery OK
 - LED green = battery very good
- 3 more LED's for alternator test:
 - LED green = charging system OK
 - LED yellow = charging system OK (maximum charging voltage)
 - LED red = charging system is not OK (it may damage the battery and other parts of the electric system)

Technical modifications reserved - we are not responsible for issues while printing