


MacPherson Spring Pumper Extractor (Moveable)

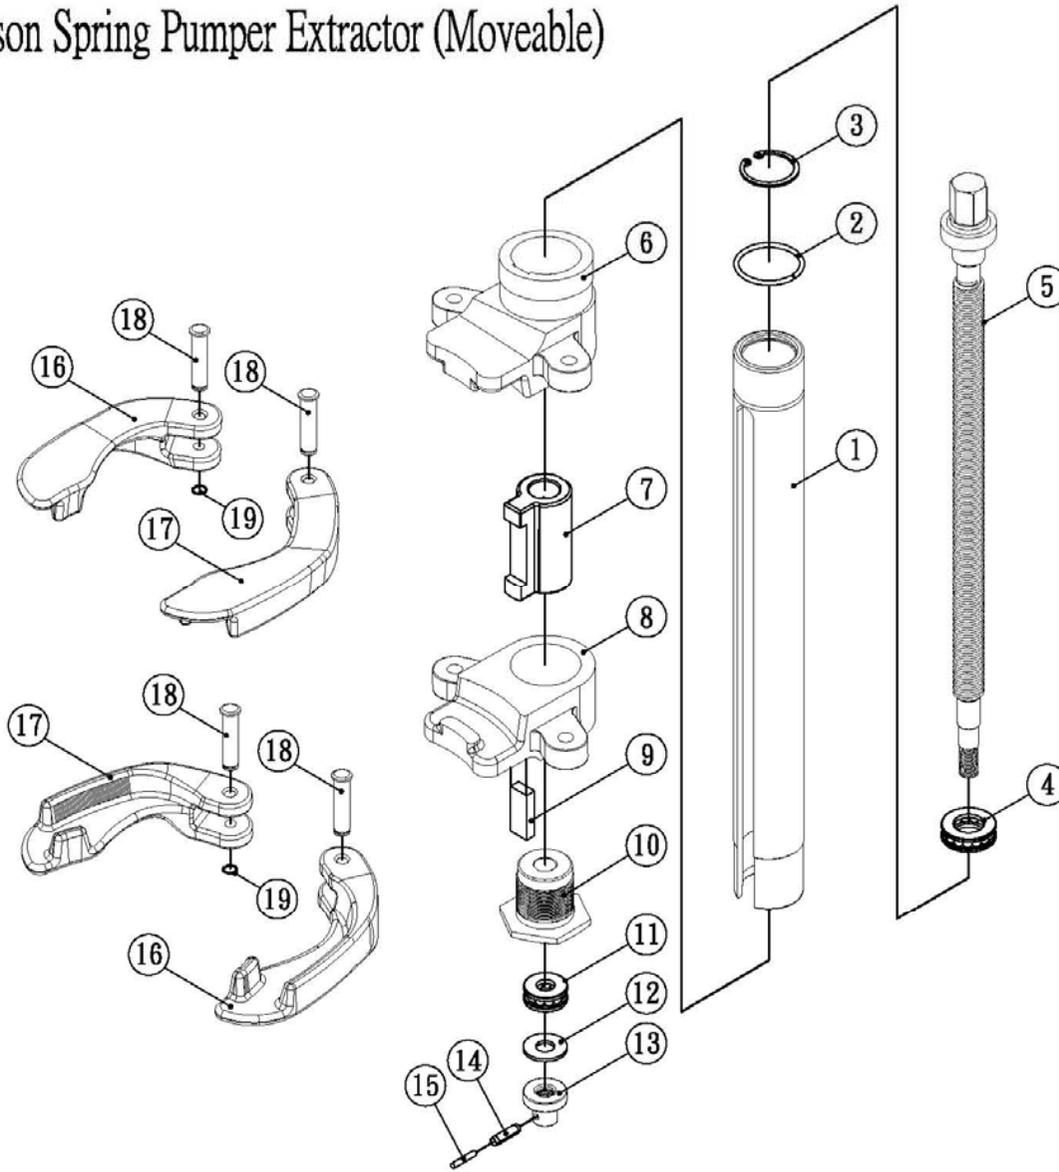

No.	Contents	Qty'
1	Main Axle(M37xP1.5)	1
2	Lock Ring	1
3	C-shape Ring	1
4	Bearing	1
5	Spindle	1
6	Moveable Holder	1
7	Nut	1
8	Lower Holder	1
9	Fixing Key	1
10	Fixing Nut	1
11	Bearing	1
12	Washer	1
13	Lower Nut	1
14	Small Spring Stick(φ4x16L)	1
15	Pin (φ2.4x16L)	1
16	Right Holder	2
17	Left Holder	2
18	Fixing Stick	4
19	C-shape Lock Ring	4

Instruction :



- Step 1. Operate the device with a wrench and turn the nut on the top of main body clockwise to press the shock absorber springs.
- Step 2. When the shock absorber srings are pressed, and then operator could repair the MacPherson shock absorber with safety.
- Step 3. When the work is done, use the wrench and turn the nut on the top of main body anticlockwise to remove the repair device.

MacPherson Spring Pumper Extractor (Moveable)

**Max. Diameter
250mm**



**Mix. Diameter
100mm**



WARNING

- *DO NOT operate this device exceed 2,900 kgf (Max. Load)*
- *Please wear professional protection glasses as operating.*