


Guide Bolt Set for VW T5 Front Mask (Art. 9204)

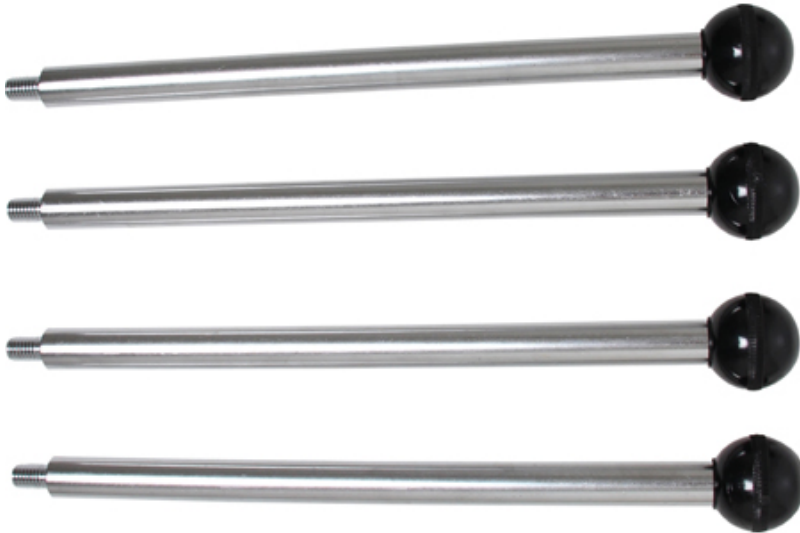

- for screwing in place of the front panel mounting bolts
- allows the panel to be slid away from the engine without disconnecting all fluid pipes etc.
- required for e.g. working on camshaft drive
- suitable for Volkswagen Transporter (as of 2004)
- includes 4 bolts M8x1.25, Ø13, length 200 mm
- to be used as OEM T10288

Technical modifications reserved - we are not responsible for issues while printing