


V-Ribbed Belt Mounting Tool Set (Art. 8301-1)

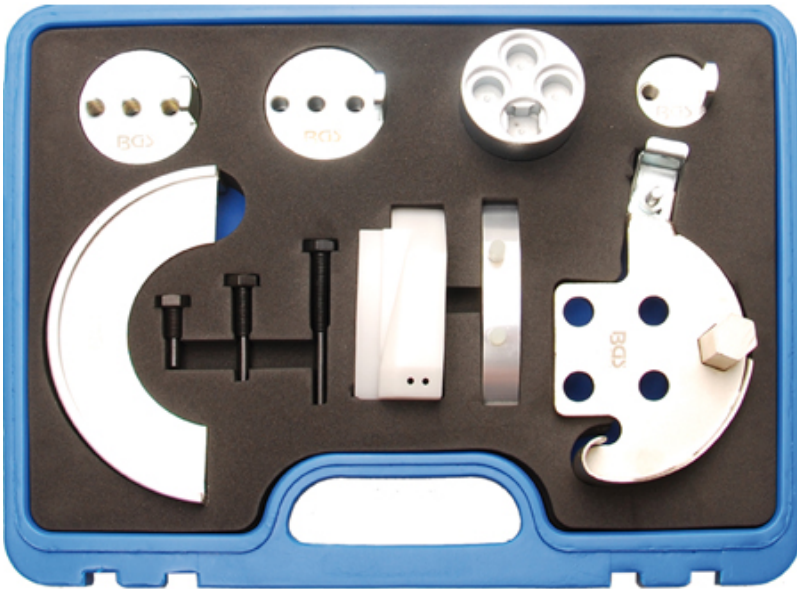

PRO +



- allows damage free mounting of flexible multi-ribbed belts
flexible belt drive requires no idler,
but these special assembly tools
- suitable for the following models:
 - BMW 118, 120, 318, 320, 325, 330, 335, 520,
525, 530, 535, 635, 720, X3, X5
 - Audi A3 1.6/2.0D
 - Seat Altea, Ibiza 1.6/2.0D
 - Skoda Octavia, Yeti 1.6/2.0D
 - Volkswagen Eos, Golf, Passat, Polo, Scirocco 2.0D
 - Chrysler Grand Voyager, Voyager 2.5D/2.8D
 - Ford C-Max, Focus, C-Max, Mondeo, Tourneo, Transit 1.4/1.6/1.8/2.0
Transit, Transit Tourneo 2.2D, Courier, Fiesta, Fusion 1.6
 - Mazda 3, 5, Axela 1.8/2.0 und Modell 2 1.2/1.4/1.6
 - Mercedes Sprinter, Viano, Vito 3.0D
 - Peugeot 206, 207, 307, Boxer 1.6D/2.2D/3.0D
 - Citroen C2, C3, C4, Jumper, Relay 1.6D/2.2D/3.0D
 - Fiat Albea, Doblo, Ducato, Fiorino, Fiorino Qubo, Linea,
Palio, Siena, Stilo, Strada Pickup 2.2D/2.3D/3.0D,
Doblo, Marea, Multipla 1.6
 - Iveco Daily 2.3D / 3.0D
 - Volvo C30, S40, V50 1.6/1.8/2.0
 - Lancia Lybra 1.6
 - Mitsubishi ASX 1.8D

Technical modifications reserved - we are not responsible for issues while printing